

STAR WARS
RETURN OF THE JEDI

mpe

78-1935-250

C-3PO[®]
ANDROID ASSEMBLY MANUAL

©, TM & Lucasfilm Ltd. LFLU 1983 All Rights Reserved.
Ludlumstone, Division of LPO Products Corp. Authorized use.

- 5 — STEP NUMBERS
- 32 — PLASTIC PART NUMBERS
- *132 — PLATED PART NUMBERS
- ⊕ — OPTIONAL
- ⊗ — DO NOT CEMENT
- ⊕ — CEMENT HERE ONLY
- 2X — REPEAT SEVERAL TIMES
- ⊖ — REMOVE
- ★ — REFER TO ...
- Ⓜ — DECAL

IMPORTANT! READ THIS FIRST

- Study assembly drawings carefully before starting.
- Each part is identified by a part number (14).
- Scrape paint from areas to be cemented.
- Before cement is used, check the fit of each part.
- Use only enough cement to join parts.
- Apply cement to small parts with a toothpick.
- Use cement made for styrene plastic only.
- Allow paint to dry thoroughly before handling.
- Your model may be painted to match the box photos.
- Cement all parts except where Do Not Cement symbol ⊗ is shown.
- Follow the step numbers ⑤ in each assembly drawing.
- * Refer to other assembly drawing for location.
- Refer to last page for decal and painting instructions.

1.A

1.B

2

3.A

3.B

4.A

4.B

5

6

7

8

NOTE: Check alignment.

9

RUBBER BAND

NOTE: Slip rubber band over hooks.

10

NOTE: Use pen to pull rubber band over pins as shown in example.


11

NOTE: Hold head in place till chest is cemented on.


NOTE: Pull rubber band over hook.

12

NOTE: Hold head in place till chest is cemented on.

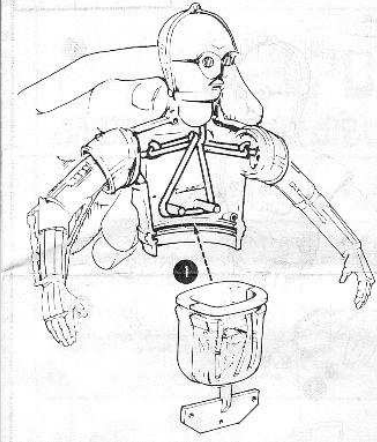


13

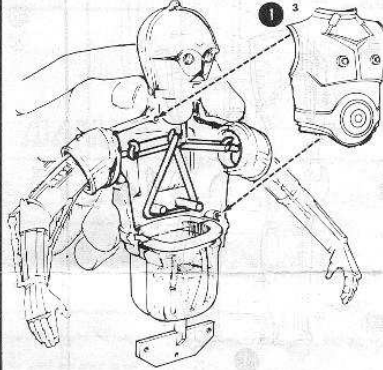


NOTE: Wrap rubber band around chest until cement is dry.


14

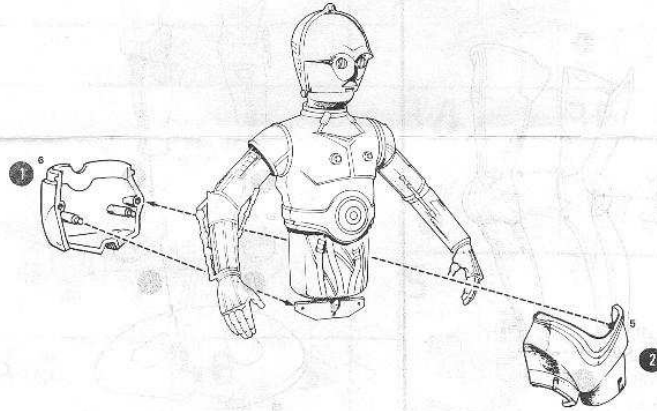

15

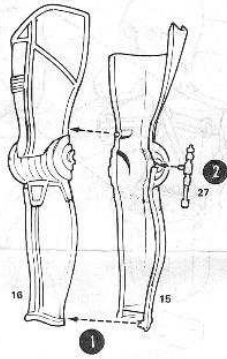

16

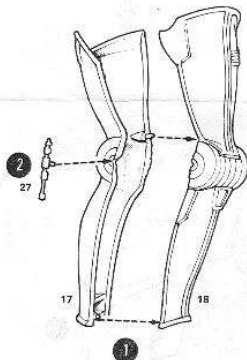

17

NOTE: Spray C3PO with clear lacquer for more shine if desired.

